


## Front Panel Functions

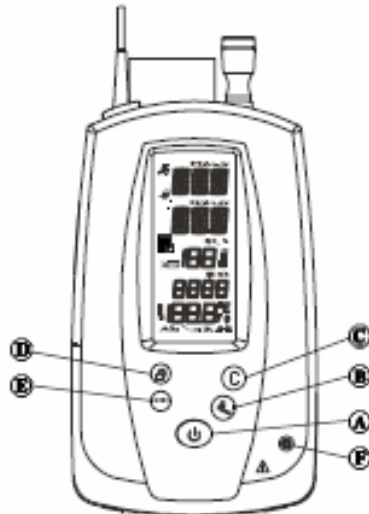

- A = ON/OFF switch.
- B = START switch.
- C = CLEAR switch.
- D = PRINT
- E = MODE switch.

To enter set up mode, press ON/OFF and START simultaneously and hold until Software version is displayed.

To step through settings use MODE switch.

To select option values use CLEAR and START keys. Press MODE again to save, or ON/OFF to exit.

Mode	Function	Range
SW1	Software version	
SW2	Software version	
Cal	The calibrate pressure.	START = close valve. Ⓒ = start pump.
PRP	Initial Peak pressure setting.	120,140,160,180,200,240,280 START/ Ⓒ to change
BLT	Back light setting.	ON OFF
MAP	Mean air way pressure.	ON OFF
DATE	Set Date, Day, month, year, And Time in Hours and minutes.	Ⓒ = Up START = down
BP	Set BP pressure display parameter	MM Or KPA
BAT	Display battery voltage.	6.62 volts
LFE	?	Pressing START initiates a pump cycle.